

Digital Forensic Analysis with Autopsy: Recovering and Interpreting System Artifacts

Kayvon Karimi


November 25, 2024

Executive Summary


Autopsy is an open-source digital forensics platform widely used by investigators to analyze digital evidence. It provides powerful tools for examining data from devices, recovering deleted files, and identifying potential evidence in a user-friendly interface. This report outlines the use of Autopsy to perform forensic analysis on multiple data sources, including a USB drive, the HackingCase files, and the M57-Jean scenario. The purpose of this lab exercise is to practice using Autopsy for ingesting and analyzing data, identifying relevant findings, and gaining hands-on experience in digital forensics

Part 1: USB Drive Analysis using Autopsy

1. Download and install Autopsy from the official website:
(<https://www.autopsy.com/download>)
2. Locate an old USB drive and ensure it has sufficient storage capacity (<4GB)
3. After installing Autopsy, launch the program and you will be prompted to start a new case or open an existing case.
 - a. Click *New Case*.

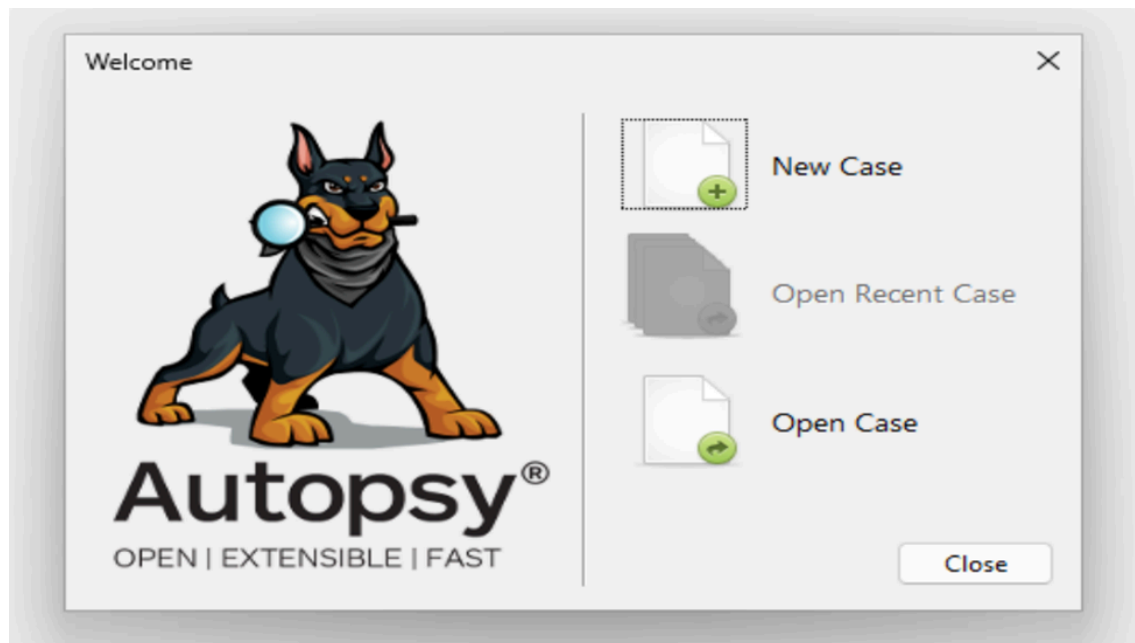

4. Enter a Case Name and identify the directory to store case data
 - a. C:\Users\jnapi\Desktop\

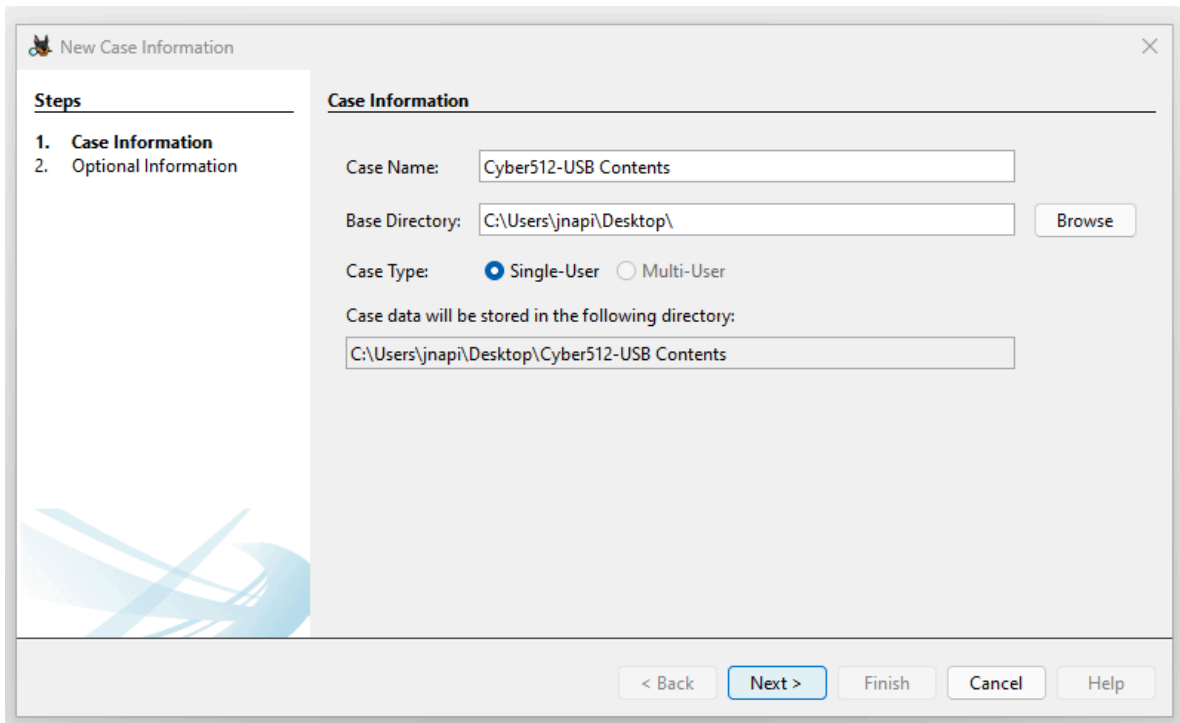

New Case Information

Steps

1. Case Information
2. Optional Information

Case Information

Case Name:


Base Directory:

Case Type: ☒ Single-User ☐ Multi-User

Case data will be stored in the following directory:

< Back **Next >** Finish Cancel Help

5. Selecting Local Disk, and Volume D for the USB data source.

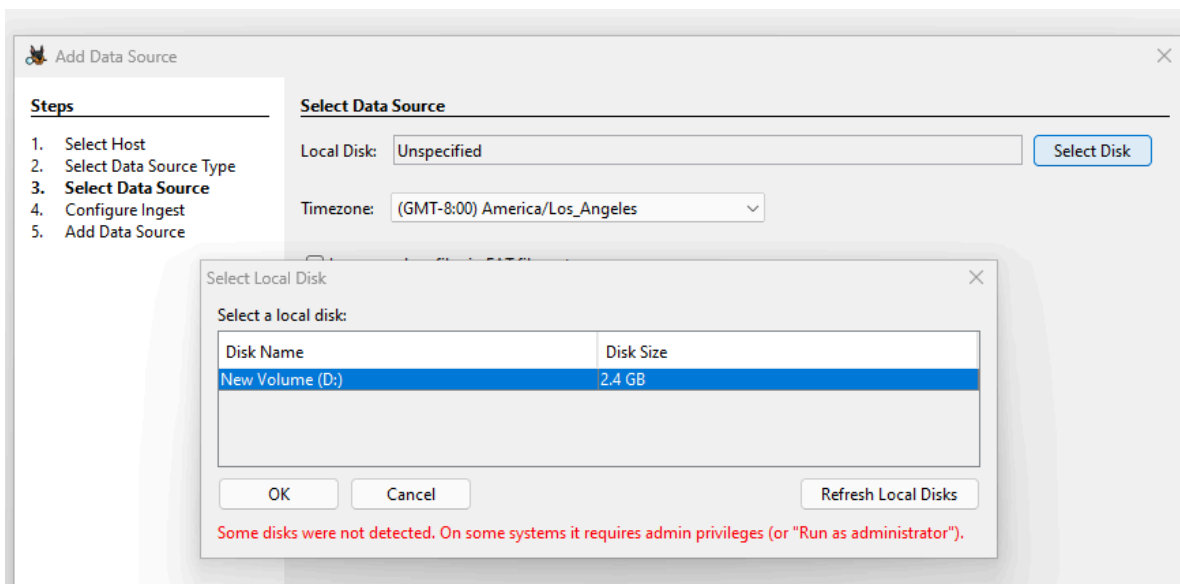

Add Data Source

Steps

1. Select Host
2. Select Data Source Type
3. Select Data Source
4. Configure Ingest
5. Add Data Source

Select Data Source

Local Disk:

Timezone:

Select Local Disk


Select a local disk:

Disk Name	Disk Size
New Volume (D:)	2.4 GB


OK Cancel Refresh Local Disks

Some disks were not detected. On some systems it requires admin privileges (or "Run as administrator").

6. After initial ingestion is complete, we review the extracted files. Since this USB had been used in the past, I added 4 new files to give it additional content. Two images and two text files were added, and then one of each was deleted.

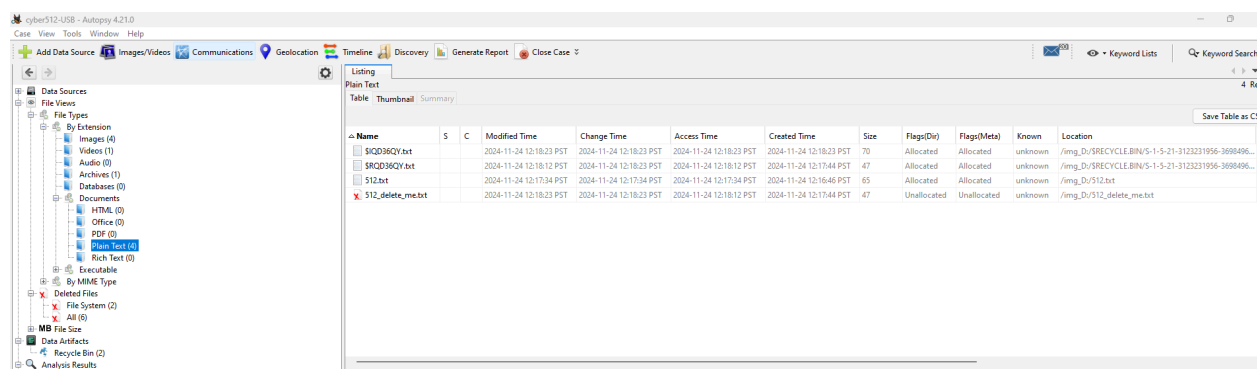

7. Reviewing the deleted files within the “File System” shows the two files which were recently added and then deleted.

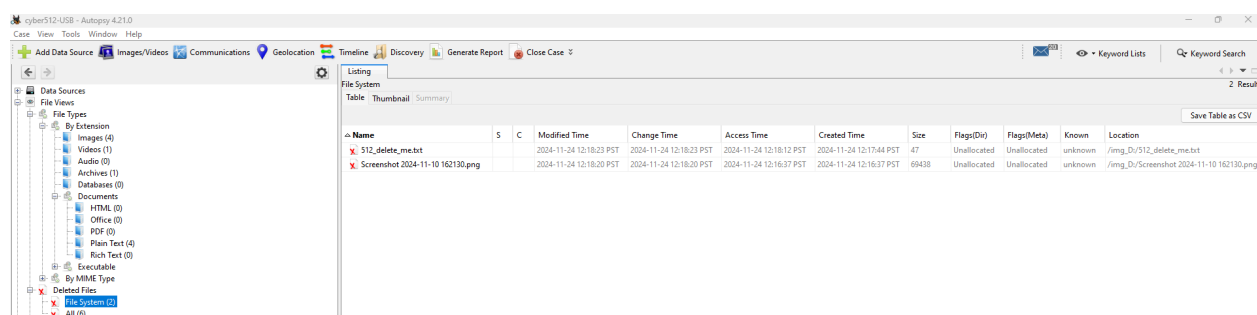

Part 1.2: What are the “CarvedFiles”, if any?

- The files identified within the dataset as “Carved Files” include the following:

f0306018.swf	Small Web File, a now defunct Adobe Flash Movie file format.
f0529824.fat	“File Allocation Table” Disk Image File, or Zinf Project “FreeAmp Theme” audio file.
f0529832.Desktop.ini	Initialization text file - allows users to customize how a file system is displayed.
f0871584_data_json.gz	A compressed archive file created using the Gnu Zip utility.

Listing											
All											
Table Thumbnail Summary											
Save Table as CSV											
△ Name	S	C	Modified Time	Change Time	Access Time	Created Time	Size	Flags(Dir)	Flags(Meta)	Known	Location
✖ 512_delete_me.txt			2024-11-24 12:18:23 PST	2024-11-24 12:18:23 PST	2024-11-24 12:18:12 PST	2024-11-24 12:17:44 PST	47	Unallocated	Unallocated	unknown	/img_Dr/512_delete_me.txt
✖ Screenshot 2024-11-10 162130.png			2024-11-24 12:18:20 PST	2024-11-24 12:18:20 PST	2024-11-24 12:16:37 PST	2024-11-24 12:16:37 PST	69438	Unallocated	Unallocated	unknown	/img_Dr/Screenshot 2024-11-10 162130.png
✖ f0306018.swf		▼	0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	917078016	Unallocated	Unallocated	unknown	/img_Dr/\$CarvedFiles/ f0306018.swf
✖ f0529824.fat			0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	4096	Unallocated	Unallocated	unknown	/img_Dr/\$CarvedFiles/ f0529824.fat
✖ f0529832.Desktop.ini			0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	129	Unallocated	Unallocated	unknown	/img_Dr/\$CarvedFiles/ f0529832.Desktop.ini
✖ f0871584_data_json.gz			0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	0000-00-00 00:00:00	611614720	Unallocated	Unallocated	unknown	/img_Dr/\$CarvedFiles/ f0871584_data_json.gz

△ Name	S	C	Modified Time	Change Time
✖ 512_delete_me.txt			2024-11-24 12:18:23 PST	2024-11-24 12:18:23 P
✖ Screenshot 2024-11-10 162130.png			2024-11-24 12:18:20 PST	2024-11-24 12:18:20 P
✖ f0306018.swf		▼	0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0529824.fat			0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0529832.Desktop.ini			0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0871584_data_json.gz			0000-00-00 00:00:00	0000-00-00 00:00:00

△ Name	S	C	Modified Time	Change Time
✖ 512_delete_me.txt			2024-11-24 12:18:23 PST	2024-11-24 12:18:23 PST
✖ Screenshot 2024-11-10 162130.png			2024-11-24 12:18:20 PST	2024-11-24 12:18:20 PST
✖ f0306018.swf		▼	0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0529824.fat			0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0529832.Desktop.ini			0000-00-00 00:00:00	0000-00-00 00:00:00
✖ f0871584_data_json.gz			0000-00-00 00:00:00	0000-00-00 00:00:00

Hex	Text	Application	File Metadata	OS Account	Data Artifacts	Analysis Results	Context	Annotations
Metadata								
Name:	/img_Dr/\$CarvedFiles/1/f0871584_data_json.gz							
Type:	Carved							
MIME Type:	application/x-gzip							
Size:	611614720							
File Name Allocation:	Unallocated							
Metadata Allocation:	Unallocated							
Modified:	0000-00-00 00:00:00							
Accessed:	0000-00-00 00:00:00							
Created:	0000-00-00 00:00:00							
Changed:	0000-00-00 00:00:00							
MD5:	acf67b8a830a56d4831ccdbf3e0e73d8							
SHA-256:	12199809a20cbdaea0b3333817330b2824e6ef251e724f575db29fd7852afe16							
Hash Lookup Results:	UNKNOWN							
Internal ID:	84							

Hex	Text	Application	File Metadata	OS Account	Data Artifacts	Analysis Results	Context	Annotations
Metadata								
Name:	/img_Dr/\$CarvedFiles/1/f0529832.Desktop.ini							
Type:	Carved							
MIME Type:	text/x-ini							
Size:	129							
File Name Allocation:	Unallocated							
Metadata Allocation:	Unallocated							
Modified:	0000-00-00 00:00:00							
Accessed:	0000-00-00 00:00:00							
Created:	0000-00-00 00:00:00							
Changed:	0000-00-00 00:00:00							
MD5:	a526b9e7c716b3489d8cc062fbc4005							
SHA-256:	e1b9ce9b57957b1a0607a72a057d6b7a9b34ea60f3f8aa8f38a3af979bd23066							
Hash Lookup Results:	UNKNOWN							
Internal ID:	82							

Part 2: Computer Forensics - Hacking Case using Autopsy

- Obtain the disk image files, .E01 and .E02, for the Hacking Case from the NIST website, <https://cfreds.nist.gov/all/NIST/HackingCase>.
 - Right-click the files and *Save link as...*



<https://cfreds-archive.nist.gov/images/4Dell%20Latitude%20CPi.E01>



<https://cfreds-archive.nist.gov/images/4Dell%20Latitude%20CPi.E02>


- Both files need to be stored in the same directory with matching file names, only the extension, .E01 and .E02 being different. This will allow Autopsy to automatically detect

and ingest them both. This would work the same if there were an additional image segment titled .E03.

3. After installing Autopsy, launch the program and you will be prompted to start a new case or open an existing case.
 - a. Click *New Case*.



4. Enter a Case Name and identify the directory to store case data.

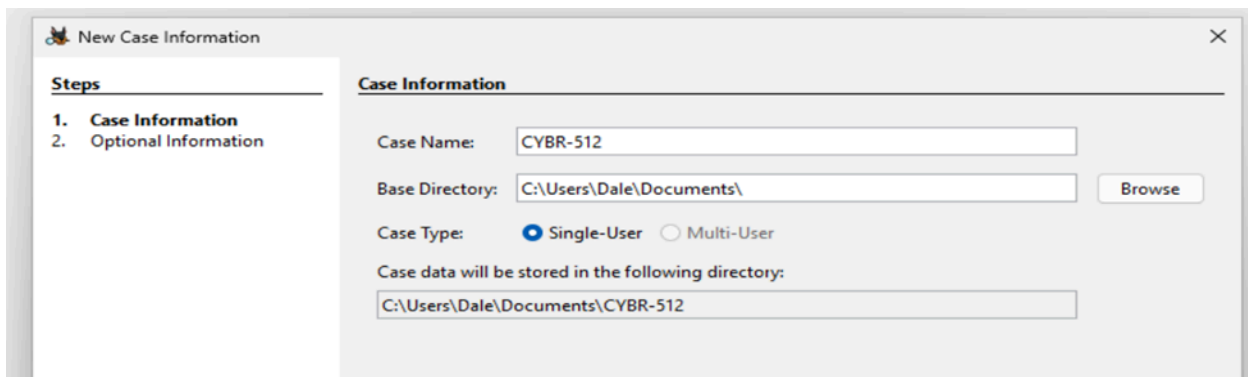The image shows the 'New Case Information' dialog box. On the left, there is a 'Steps' section with two items: '1. Case Information' and '2. Optional Information'. The 'Case Information' section is currently active. It contains the following fields: 'Case Name' with the text 'CYBR-512', 'Base Directory' with the text 'C:\Users\Dale\Documents\' and a 'Browse' button to its right, 'Case Type' with two radio buttons: 'Single-User' (which is selected) and 'Multi-User', and a text box for 'Case data will be stored in the following directory:' with the text 'C:\Users\Dale\Documents\CYBR-512'.

5. Click *Next* and enter any optional information that is relevant.

New Case Information

Steps

1. Case Information
2. **Optional Information**

Optional Information

Case

Number: 1

Examiner

Name: Group 3

Phone:

Email:

Notes:

Organization

Organization analysis is being done for: Not Specified Manage Organizations

6. Next, you'll be prompted to add a data source, this will be the files downloaded in step 1.
- a. The data source type will be a disk image.

Add Data Source

Steps

1. **Select Host**
2. Select Data Source Type
3. Select Data Source
4. Configure Ingest
5. Add Data Source

Select Host

Hosts are used to organize data sources and other data.

☒ Generate new host name based on data source name

☐ Specify new host name

☐ Use existing host

Add Data Source

Steps

1. Select Host
2. **Select Data Source Type**
3. Select Data Source
4. Configure Ingest
5. Add Data Source

Select Data Source Type

☒ Disk Image or VM File

☐ Local Disk

☐ Logical Files

☐ Unallocated Space Image File

☐ Autopsy Logical Imager Results


☐ XRY Text Export

7. Navigate to the directory where the disk image files are located and select the one ending in .E01. Autopsy will automatically ingest .E02.

The screenshot shows the 'Add Data Source' dialog box with the 'Select Data Source' tab selected. On the left, a 'Steps' list shows: 1. Select Host, 2. Select Data Source Type, 3. **Select Data Source**, 4. Configure Ingest, 5. Add Data Source. The main area contains: 'Path:' with a text box containing 'C:\Users\Dale\Documents\4Dell Latitude CPi.E01'; an unchecked checkbox for 'Ignore orphan files in FAT file systems'; 'Time zone:' with a dropdown menu showing '(GMT-5:00) America/New_York'; and 'Sector size:' with a dropdown menu showing 'Auto Detect'.

The screenshot shows the 'Add Data Source' dialog box with the 'Add Data Source' tab selected. The 'Steps' list on the left is: 1. Select Host, 2. Select Data Source Type, 3. Select Data Source, 4. Configure Ingest, 5. **Add Data Source**. The main area displays the message: 'Data source has been added to the local database. Files are being analyzed.'

8. Autopsy will begin ingesting the files. Once complete, you can open the Data Sources Summary to verify the ingest was successful.

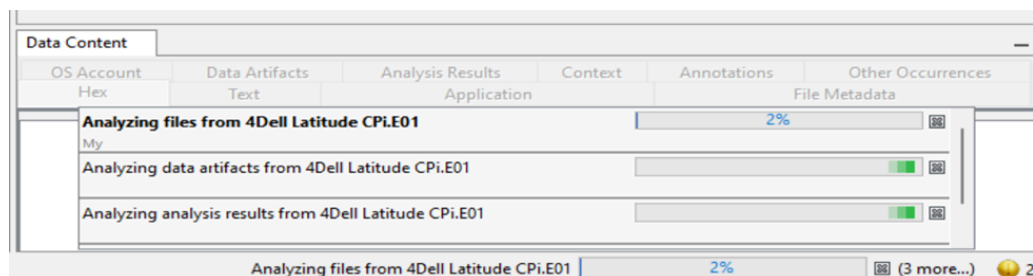

Data Sources Summary					
Data Source Name	Ingest Status	Type	Files	Artifacts	Tags
4Dell Latitude CPi.E01	Completed	OS Drive (Microsoft Windows...	26652	12482	

Types	User Activity	Analysis	Recent Files	Past Cases	Geolocation	Timeline	Ingest History	Container
Display Name: 4Dell Latitude CPi.E01 Name: 4Dell Latitude CPi.E01 Device ID: 8713b80e-774d-480b-ad0f-930143bac400 Time Zone: America/New_York Acquisition Details: Acquired Date: Wed Sep 22 10:06:04 2004 System Date: Wed Sep 22 10:06:04 2004 Acquiry Operating System: Windows XP Acquiry Software Version: 4.19a Image Type: E01 Size: 4.87 GB (4871301120 bytes) Unallocated Space: 3.19 GB (3189226610 bytes) Sector Size: 512 bytes MD5: aee4fcd9301c03b3b054623ca261959a SHA1: SHA256: File Paths: C:\Users\Dale\Documents\4Dell Latitude CPi.E01 C:\Users\Dale\Documents\4Dell Latitude CPi.E02								

Part 3: M57-Jean Scenario Analysis using Autopsy

What are the contents of the “Recycler” in the target image?

1. The Recycler folder in the m57-jean image contains three items:

M57BizFileLeak - Autopsy 4.21.0

Case

View

Tools

Window

Help

+

 Add Data Source

📁

 Images/Videos

✉

 Communications

📍

 Geolocation

📅

 Timeline

🔍

 Discovery

📄

 Generate Report

🔒

 Close Case

🔍

 Keyword Lists

🔍

 Keyword Search

vol1 (Unallocated: 0-62)

vol2 (NTFS / exFAT (0x07): 63-20948759)

\$OrphanFiles (0)

\$Extend (5)

\$Unalloc (8)

Documents and Settings (9)

Program Files (26)

RECYCLER (3)

S-1-5-21-484763869-796845957-839522115-1004

System Volume Information (5)

WINDOWS (140)

vol3 (Unallocated: 20948760-20971519)

File Views

File Types

Deleted Files

MB File Size

Data Artifacts

Communication Accounts (11)

E-Mail Messages (259)

Installed Programs (40)

Metadata (4)

Operating System Information (1)

Recent Documents (9)

Run Programs (126)

Shell Bags (42)

USB Device Attached (14)

Web Bookmarks (97)

Web Cookies (406)

Web Downloads (3)

Listing

/img_nps-2008-jean.E01/vol2/RECYCLER/S-1-5-21-484763869-796845957-839522115-1004

5 Results

Table

Thumbnail

Summary

Save Table as CSV

Name	S	C	O	Modified Time	Change Time	Access Time	Created Time	Size
[current folder]				2008-07-11 11:01:00 PDT	2008-07-11 11:01:00 PDT	2008-07-19 17:00:43 PDT	2008-07-11 11:00:56 PDT	344
[parent folder]				2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	320
Dc1.jpg				2008-07-10 23:25:19 PDT	2008-07-11 11:01:00 PDT	2008-07-11 11:00:37 PDT	2008-07-10 23:25:19 PDT	29561
desktop.ini				2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	65
INFO2				2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 11:00:56 PDT	820

Hex

Text

Application

File Metadata

OS Account

Data Artifacts

Analysis Results

Context

Annotations

Other Occurrences

Analyzing files from nps-2008-jean.E01 12% (3 more...)

a. **Dc1.jpg**: An image file, size 29,561 bytes, last modified on 2008-07-10.

Dc1.jpg			2008-07-10 23:25:19 PDT	2008-07-11 11:01:00 PDT	2008-07-11 11:00:37 PDT	2008-07-10 23:25:19 PDT	29561
desktop.ini			2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	65
INFO2			2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 11:00:56 PDT	820

Hex	Text	Application	File Metadata	OS Account	Data Artifacts	Analysis Results	Context	Annotations	Other Occurrences
Strings									
Page: 1 of 2 Page Go to Page: Script: Latin - Basic									
JFIF LEAD Technologies Inc. V1.01 \$ < \$!!\$J58, <XM\VMUSam hSUy \$G"G \$3br %&'()*456789:CDEFGHIJSTUVWXYZcdefghijstuvwxyz #3R &'()*56789:CDEFGHIJSTUVWXYZcdefghijstuvwxyz +_aS "Q<h n&2(U'[(ik[O_1 yZm_B ll^#									

b. **desktop.ini**: A configuration file, size 65 bytes, last modified on 2008-07-11.

desktop.ini			2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	2008-07-11 11:00:56 PDT	65
INFO2			2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 11:00:56 PDT	820

Hex	Text	Application	File Metadata	OS Account	Data Artifacts	Analysis Results	Context	Annotations	Other Occurrences
Strings									
Page: 1 of 1 Page Go to Page: Script: Latin - Basic									
[.ShellClassInfo] CLSID={645FF040-5081-101B-9F08-00AA002F954E}									

c. **INFO2**: A metadata file, 820 bytes, last modified on 2008-07-11.

- i. This file maintains records of deleted files, including original file paths and deletion timestamps.

INFO2			2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 23:04:36 PDT	2008-07-11 11:00:56 PDT	820
-------	--	--	-------------------------	-------------------------	-------------------------	-------------------------	-----

Hex	Text	Application	File Metadata	OS Account	Data Artifacts	Analysis Results	Context	Annotations	Other Occurrences
Strings									
Page: 1 of 1 Page Go to Page: Script: Latin - Basic									
C:\Documents and Settings\Jean\Desktop\tag-cloud.jpg C:\Documents and Settings\Jean\Desktop\tag-cloud.jpg									

Conclusion

This report demonstrates the practical application of Autopsy for digital forensic analysis, highlighting its ability to recover and examine data from diverse sources, including USB drives, disk images, and scenario-based datasets. These exercises provided valuable insights into data ingestion, artifact recovery, and evidence interpretation using a powerful forensic platform.